 


QUICK START-UP GUIDE

ELITE FREEDOM

If you have questions about your machine, DON'T contact your dealer; please call Lobster Sports directly at 800.210.5992

1. To properly turn on the machine, ensure that the ball FEED (C) is set to 10 and the SPEED dial (D) is set to 35, as depicted below. **PLEASE DO THIS BEFORE YOU TURN ON YOUR MACHINE.**
2. Turn machine on by switching the POWER button (A) up to the ON position on the control panel.

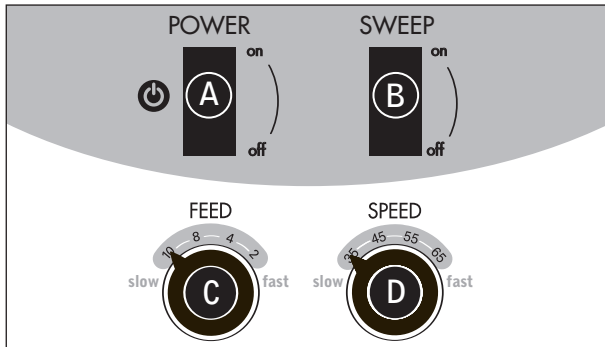

 
3. **ELEVATION HAND CRANK:** Pull-out and twist the Elevation Knob located on the lower right side of the machine **clockwise to raise your ball trajectory up** and **turn counter-clockwise to lower your ball trajectory.**

QUICK START-UP GUIDE

ELITE FREEDOM

If you have questions about your machine, DON'T contact your dealer; please call Lobster Sports directly at 800.210.5992

1. To properly turn on the machine, ensure that the ball FEED (C) is set to 10 and the SPEED dial (D) is set to 35, as depicted below. **PLEASE DO THIS BEFORE YOU TURN ON YOUR MACHINE.**
2. Turn machine on by switching the POWER button (A) up to the ON position on the control panel.

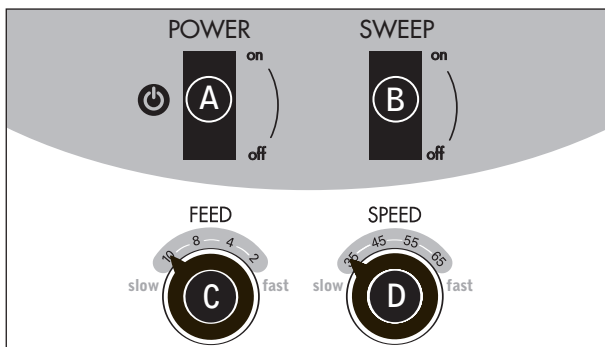


3. **ELEVATION HAND CRANK:** Pull-out and twist the Elevation Knob located on the lower right side of the machine **clockwise to raise your ball trajectory up** and **turn counter-clockwise to lower your ball trajectory.**

QUICK START-UP GUIDE

ELITE FREEDOM

If you have questions about your machine, DON'T contact your dealer; please call Lobster Sports directly at 800.210.5992

 1. To properly turn on the machine, ensure that the ball FEED (C) is set to 10 and the SPEED dial (D) is set to 35, as depicted below. **PLEASE DO THIS BEFORE YOU TURN ON YOUR MACHINE.**
2. Turn machine on by switching the POWER button (A) up to the ON position on the control panel.

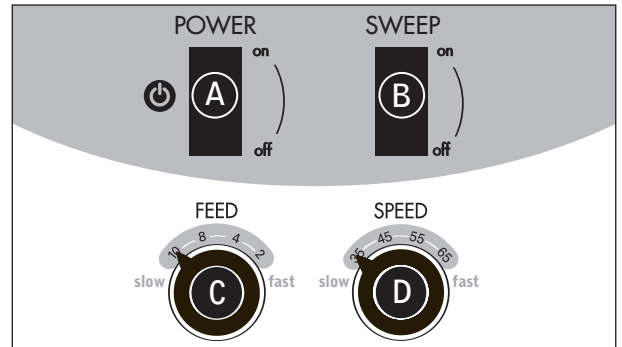


3. **ELEVATION HAND CRANK:** Pull-out and twist the Elevation Knob located on the lower right side of the machine **clockwise to raise your ball trajectory up** and **turn counter-clockwise to lower your ball trajectory.**

QUICK START-UP GUIDE

ELITE FREEDOM

If you have questions about your machine, DON'T contact your dealer; please call Lobster Sports directly at 800.210.5992

 1. To properly turn on the machine, ensure that the ball FEED (C) is set to 10 and the SPEED dial (D) is set to 35, as depicted below. **PLEASE DO THIS BEFORE YOU TURN ON YOUR MACHINE.**
2. Turn machine on by switching the POWER button (A) up to the ON position on the control panel.

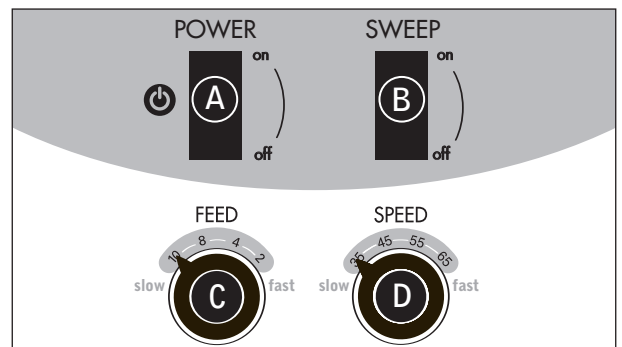

3. **ELEVATION HAND CRANK:** Pull-out and twist the Elevation Knob located on the lower right side of the machine **clockwise to raise your ball trajectory up** and **turn counter-clockwise to lower your ball trajectory.**