

# external ac power supply

## OPERATING PROCEDURES

- **DO NOT operate or leave the AC power supply out in the rain.** If you do, the warranty will be voided.
- Before using, make certain the battery is fully charged. The AC power supply will not work properly, if the battery is left uncharged.
- Connect the standard 3-prong power cord from the external AC power supply to a grounded outdoor extension cord. Please use only one extension cord.
- Connect the round connection cable from the external AC power supply to the round charging jack mounted on your machine's red case.
- Always use the AC power supply at the start of play.
- Recharge the battery after each use. Even when using the power supply, you will lose some of the battery charge.
- **DO NOT use the power supply to recharge the battery,** as this may damage the battery.
- Always store the power supply indoors.

INPUT: 100-120VAC, 2.5A, 50-60HZ  
 INPUT: 200-240VAC, 1.5A, 50-60HZ



# external ac power supply

## OPERATING PROCEDURES

- **DO NOT operate or leave the AC power supply out in the rain.** If you do, the warranty will be voided.
- Before using, make certain the battery is fully charged. The AC power supply will not work properly, if the battery is left uncharged.
- Connect the standard 3-prong power cord from the external AC power supply to a grounded outdoor extension cord. Please use only one extension cord.
- Connect the round connection cable from the external AC power supply to the round charging jack mounted on your machine's red case.
- Always use the AC power supply at the start of play.
- Recharge the battery after each use. Even when using the power supply, you will lose some of the battery charge.
- **DO NOT use the power supply to recharge the battery,** as this may damage the battery.
- Always store the power supply indoors.

INPUT: 100-120VAC, 2.5A, 50-60HZ  
 INPUT: 200-240VAC, 1.5A, 50-60HZ



# external ac power supply

## OPERATING PROCEDURES

- **DO NOT operate or leave the AC power supply out in the rain.** If you do, the warranty will be voided.
- Before using, make certain the battery is fully charged. The AC power supply will not work properly, if the battery is left uncharged.
- Connect the standard 3-prong power cord from the external AC power supply to a grounded outdoor extension cord. Please use only one extension cord.
- Connect the round connection cable from the external AC power supply to the round charging jack mounted on your machine's red case.
- Always use the AC power supply at the start of play.
- Recharge the battery after each use. Even when using the power supply, you will lose some of the battery charge.
- **DO NOT use the power supply to recharge the battery,** as this may damage the battery.
- Always store the power supply indoors.

INPUT: 100-120VAC, 2.5A, 50-60HZ  
 INPUT: 200-240VAC, 1.5A, 50-60HZ



# external ac power supply

## OPERATING PROCEDURES

- **DO NOT operate or leave the AC power supply out in the rain.** If you do, the warranty will be voided.
- Before using, make certain the battery is fully charged. The AC power supply will not work properly, if the battery is left uncharged.
- Connect the standard 3-prong power cord from the external AC power supply to a grounded outdoor extension cord. Please use only one extension cord.
- Connect the round connection cable from the external AC power supply to the round charging jack mounted on your machine's red case.
- Always use the AC power supply at the start of play.
- Recharge the battery after each use. Even when using the power supply, you will lose some of the battery charge.
- **DO NOT use the power supply to recharge the battery,** as this may damage the battery.
- Always store the power supply indoors.

INPUT: 100-120VAC, 2.5A, 50-60HZ  
 INPUT: 200-240VAC, 1.5A, 50-60HZ

