

# SNAP-IN POINTER

## Quick Installation Guide

DO NOT INSTALL WHILE MACHINE IS ON

1. Make sure machine is powered off.
2. Align pointer, as shown below, with the slot located on the front edge of bracket between the server wheels.
3. Push the pointer into slot until a click is heard or felt.

