



TS - My Machine Won't Turn On

Objective: To troubleshoot machines that will not turn on

Action		Pictures
<p>The more common statements regarding powering issues are...</p> <p>“My machine will not turn on”</p> <p>“I flip the power switch and nothing happens”</p> <p>This indicates one of the following: The reset switch has tripped. The main battery wires are disconnected. The main power switch is in the off position. (EL04, EL05, EL05 LE models only)</p>		
<p>Step 1 – Check Reset Switch</p> <ol style="list-style-type: none"> 1. Check if the reset switch has been tripped. If it is showing any white around the reset button, press it back in and turn the machine on. 2. On Elite models (EL0A-EL03) the reset switch is located on the front of the control panel. 3. On Elite Grand models (EL04, EL05, EL05 LE) The reset switch is found underneath the rear of machine, to the right of the case mounting bracket. 4. If reset switch has tripped, First turn off the Man Power Switch (A) (found on the left hand side of the rear of the machine), then proceed to turn press in the Reset Switch (B) (<i>*When tripped the Reset Switch will expose 1/16th of an inch of white on its underbelly</i>). (Found on the right hand rear side of the machine). 5. Turn the Main Power Switch (A) to the On position, and then press the power button (C) on the control panel. <p>If the reset switch is not tripped and the machine still does not turn on then go to Step 2</p>		 <p>Reset Switch (EL0A-EL03)</p>  <p>A. Main Power Switch B. Reset Switch C. Power Switch (panel).</p>  <p>Main Power switch (to the left). Reset Switch (to the right).</p>  <p>Reset Switch (EL04-EL05 LE)</p>
<p>Step 2 – Check Main Battery Wires</p> <ol style="list-style-type: none"> 1. Check to make sure the main battery wires 		



TS - My Machine Won't Turn On

are securely attached to the battery terminals. To do this you will need a phillips-head screw driver.

2. Unscrew the control panel and pull it out and to the side being careful not to disconnect any wires.
3. Through the square cut-out in the red case you will see the battery just inside the machine.
4. Check to make sure the battery or main power wires are firmly connected to the battery terminals. Red wire to positive terminal, black wire to negative terminal.
5. Reconnect loose battery wires and restart machine.

Below are the main battery wire connections for each model.

Elite Grand Series (EL04, EL05, EL05 LE)


1. Black or negative wire connects from the black battery tab to the back of the control panel on one of the tabs labeled "Bat Neg" (battery negative)
2. Red or positive wire connects to the red battery tab and is connected into one of the tabs on the back of the reset switch.
3. Red or positive wire from the Main Power switch, located underneath the rear of the machine to the left of the chassis bracket, connects to the back of the control panel on the tab labeled "Bat Pos" (battery positive)

Elite 1-3 (EL01, EL02, EL03)


1. Black or negative wire connects from the black battery tab to the back of the control panel on one of the tabs labeled "Bat Neg" (battery negative)




Control Panel – Open

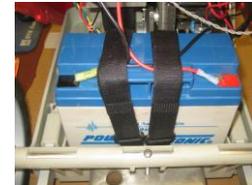

Battery Terminal Wires

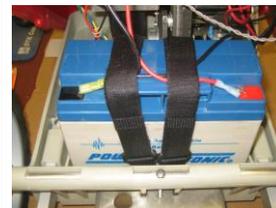

Battery Terminal Wires

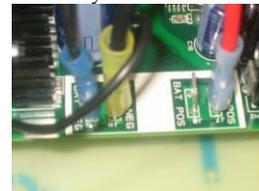

"Bat Neg" & "Bat Pos" Connections




Main Power Switch



Main Power Switch Wires

TS - My Machine Won't Turn On

2. Red or positive battery wire connects to the red battery tab and is connected into one of the tabs on the back of the reset switch.

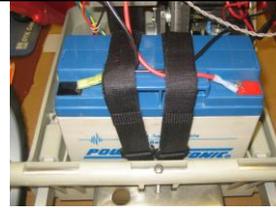

Battery Terminal Wires




"Bat Neg" connection



Back of Reset Switch

Elite Freedom (EL0A)

1. Black or negative battery wire connects from the battery to the back of the control panel on one of the tabs labeled "Bat Neg" (battery negative)
2. Red or positive battery wire connects to one of the tabs on the back of the reset switch.

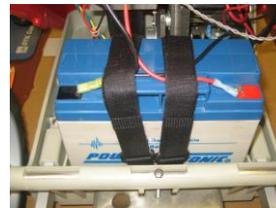

Battery Terminal Wires



"Bat Neg" connection



Back of Reset Switch

Once you have determined that the power wires are connected properly and if the machine still does not turn on then the battery is depleted and needs to be charged. **(Refer to TS - My Machine Won't Charge)**

Step 3 - Check Main Power Switch (EL04, EL05, EL05 LE models only)

1. Check to make sure the main power switch is in the on or upright position.



TS - My Machine Won't Turn On

2. The main power switch is located underneath the rear of machine, to the left of the chassis bracket.

If the machine still does not turn on then the battery is depleted and needs to be charged. (refer to **TS - My Machine Won't Charge**)

If the problem still continues, contact Technical Support at support@lobstersports.com or call Technical Support at 1-800-526-4041 ext.14.



Main Power Switch