



Repair Instructions

Replacing and Installing a New Elevation Motor

Elite Models that Apply: EL04-EL05LE

Step	Description	Tools	Picture
1	<p style="text-align: center;">Removing The Case</p> <p>Step 1.) Unscrew the (6) Phillips-head screws along the bottom of the red case where it attaches to the chassis of the machine. (2-front, 2-rear, one on each side)</p> <p>Step 2.) Lift the red case off the chassis and set it aside.</p>	Phillips Screw Driver	 <p>Case Screws (Front & Rear)</p> <p>Case Screws (Side)</p> <p>Case Removed</p>
2	<p style="text-align: center;">Removing The Yoke Assembly</p> <p>Step 1.) Take off your server wheels by unscrewing the set screw, and sliding the wheels off of the server motor shafts.</p> <p>Step 2.) With the front end of the machine facing you (the pointer closest to you, and the handle furthest from you), remove both of the server wheels.</p> <p>Step 3.) Passing through the center of the Yoke and the davit assembly is the Yoke Bolt. (This bolt has a nut holding it on the end of the Davit Right). Using a Crescent Wrench and a 9/16" Wrench, unscrew and remove the Yoke Bolt, the Small and Larger Spacer, and the 3 to 5 washers. <i>*(Carefully set these in separate safe location for later use.)*</i></p> <p>Step 4.) Cut all the zip ties holding the wires together</p>	1/8" Allen Crescent Wrench 9/16" Wrench	 <p>The Server wheels.</p> <p>The Yoke Bolt being removed.</p>

Repair Instructions

Replacing and Installing a New Elevation Motor

and then CAREFULLY remove the Yoke Assembly off of the Davit Assembly and set it aside.

Removing and Installing The Elevation Motor


Step 1.) Unplug the Elevation Motor wire from the Elevation tab on your control panel (J14).

Step 2.) Unplug the Elevation Positive quick disconnect wire. (This is coming off of the 3 small red, green, and black wires connected to the Elevation Motor).

Step 3.) Unscrew all 4 screws holding the Elevation Motor to the Davit Center. On the back side of the motor, between the Davit Center and the motor, are a total of 4 spacers, make sure these spaces are saved for use later.

Step 4.) Remove the Old Elevation Motor and set it aside. Align the 4 screws up with the holes marked on diagram below.

3

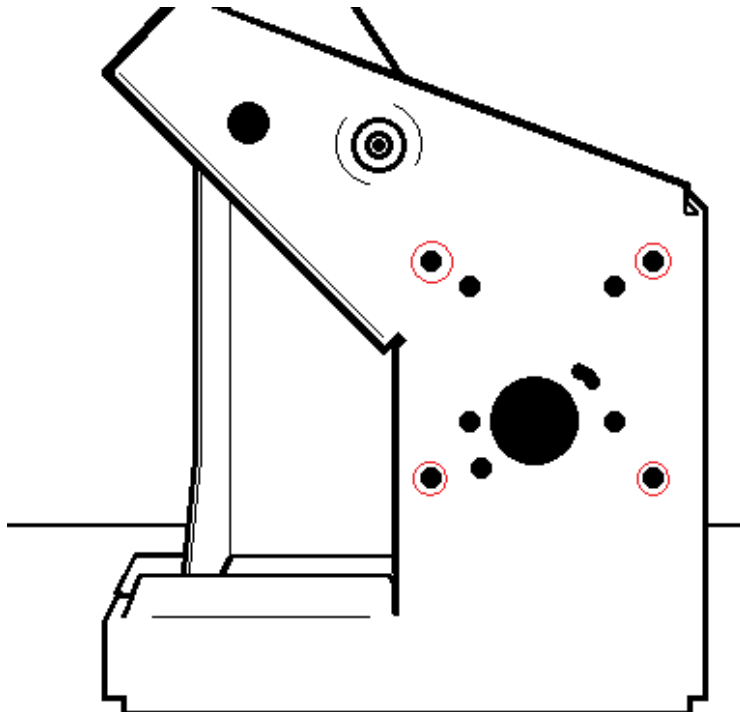

**The holes are marked in Red.*



Control Panel J14 Elevation plug.



Elevation Quick disconnect location.



Elevation Quick disconnect disconnected.



Unscrewing Elevation Motor Screws.



Removing Elevation motor.

Repair Instructions


Replacing and Installing a New Elevation Motor

Push the 4 screws in through the holes about $\frac{3}{4}$ of an inch. Slide the 4 plastic spacers onto the screws. (Please see diagram below).



Step 5.) Hold the new motor into position with one hand, (Make sure the motor is Top is at its highest elevated point), and proceed to fasten the 4 screws down.

Step 6.) Once you have the Elevation Motor fastened into place, follow the 3 snap-in sensor wires coming from the end of the motor. (red, black, and green). These wires should plug into the Elevation Pos labeled Quick Disconnect. (Please see diagram below).

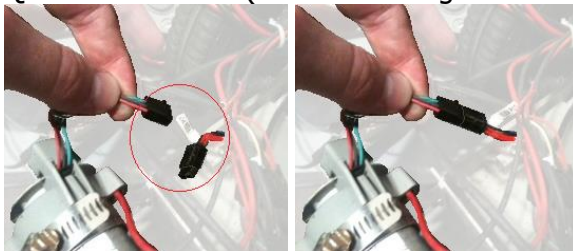

Step 7.) Reconnect the Elevation Motor wire into the J14 Elevation tab on the control panel.



The Elevation Motor being held into place.



Elevation Quick disconnect disconnected.



Elevation Quick disconnect connected.



Control Panel J14 Elevation plug.

4

Re-Attaching the Yoke






Step 1.) Take the yoke with one hand, (make sure that the pointer is facing you, and the top of the chute or

1/8" Allen

Crescent Wrench

Repair Instructions

Replacing and Installing a New Elevation Motor

	<p>slide, is facing away from you.) and slide the yoke bolt threw the yoke, passing through the first metal davit piece.</p> <p>Step 2.) Put 3 washers on the threaded portion of the yoke bolt, and then pass the yoke bolt threw the plastic long spacer until it exits out of the second metal davit piece.</p> <p>Step 3.) Put the washer over the threaded yoke bolt end, and then continue to fasten the yoke bolt nut until it is slightly snug. DO NOT OVER TIGHTEN OR YOUR ELEVATION WILL NOT WORK PROPERLY!!!</p> <p>Step 4.) Put your server wheels on, make sure that the set screw is facing out away from the server motors.</p>	<p>9/16" Wrench</p>	 <p>Yoke being fasten to Davit Assembly by Yoke Bolt..</p>  <p>The Server wheels.</p>
<p>5</p>	<p style="text-align: center;">Re-attaching The Case</p> <p>Step 1.) Lift the red case onto the Chassis. Once the case is on-top of the Chassis, take the control panel, and pull it through the hole. Lower the rest of the case until it is covering the whole Chassis of the machine.</p> <p>Step 2.) Screw the (6) Philips-head screws along the bottom of the red case where it attaches to the chassis of the machine. (2-front, 2-rear, one on each side)</p>	<p>Phillips Screw Driver</p>	 <p>Case Removed</p>  <p>Case Screws (Front & Rear)</p>  <p>Case Screws (Side)</p>

<p>How to Order Elite Replacement Parts</p>	<p>Elite Parts</p>
<p>Website: http://www.lobstersports.com Email: sales@lobstersports.com</p>	



Repair Instructions

Replacing and Installing a New Elevation Motor

Phone: 800.526.4041

Fax: 818.764.6061

We accept Visa, MasterCard or Discover & PayPal

For Elite Freedom: